


Nova-Flo®

The Flood Prevention Device

Installation Instructions

VERSION
NF3

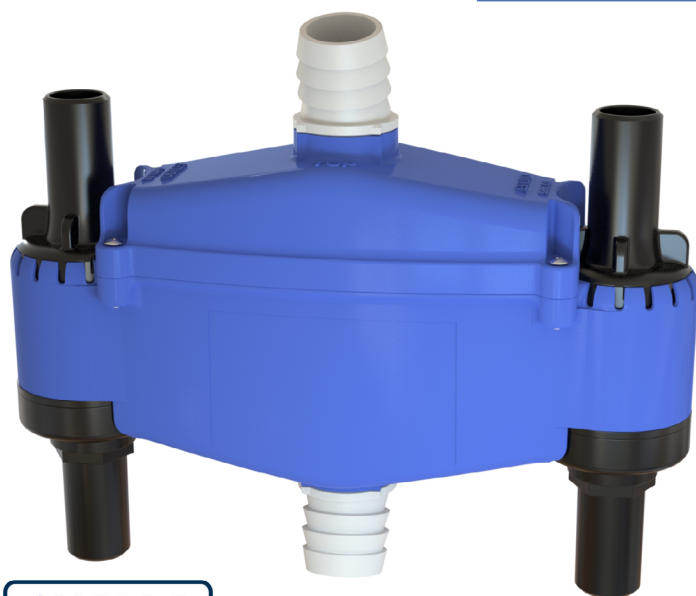

www.nova-flo.com

Congratulations on purchasing a Nova-Flo® flood prevention device.

Fitted correctly, Nova-Flo® will provide peace of mind to homeowners, landlords, hotels and care providers by protecting against overflowing baths that would otherwise result in costly flood damage and lost rental income. Since activation substantially shuts off tap supplies Nova-Flo® will also prevent water wastage and reduce energy consumption.

In some instances, Nova-Flo® can be installed to kitchen sinks and basins. For further guidance, please refer to our website: www.nova-flo.com

Recommendation

Installing Nova-Flo® to a bath or sink requires an understanding of the individual plumbing arrangements. Installers must ensure water supplies can be isolated.


We recommend using a qualified professional who is familiar with work of this nature. **Nova-Flo® must not be installed under any tension and is designed to be used with 22mm push-fit connections.**

Box contents	
Quantity	Item
1	Nova-Flo® unit
2	Large Barb Connector
2	Small Barb Connector
2	O-ring for Barb Connector
2	Rubber Sleeve

Orientation

The Nova-Flo® unit must be fitted in a vertical orientation. It must not be fitted lying flat or at an angle as this will hinder operation. Directions are clearly marked on the main body of the unit.

Fig. 1
Part descriptions & dimensions (mm)

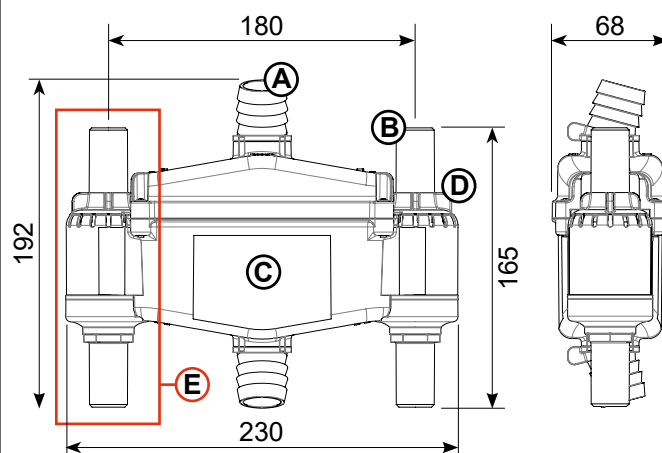

- (A) Barb connector
- (B) 22mm spigots
- (C) Main body
- (D) Securing ear
- (E) Side valve

WARNING

Do not use soldered or compression fittings or solder flux in direct contact with the unit. Care must be taken to avoid any heat transfer to the unit if soldering fittings in close proximity.

Positioning

The unit must be located between the overflow outlet (See Fig. 3) and the waste trap, as close to the overflow outlet as possible. If required, fixings such as cable ties or flexible wire can be used through the ears (Fig. 1, D) to support the unit in the preferred position. This will allow any excess water flowing from the overflow outlet of the bath to pass through the unit causing activation of the valves to shut off the supply water.

The positioning of the unit is the same for all types of installations. The location of taps will have no effect on how the Nova-Flo® operates, making it suitable for virtually any tap style or location.

Connection to overflow pipe

Nova-Flo® will fit the majority of flexible overflow pipes found on common bath overflows. The existing overflow pipe will need to be cut to leave two lengths. Take care measuring to ensure that there is an adequate length of pipe leading to and from the barb connectors.

The barb connector (Fig. 1, A) is attached to the Nova-Flo® body by insertion and rotation of 45 degrees clockwise (Fig. 2).

The four points on the barb connector must line up with the point indicators on the body and cap when fully secure.

The barb is set at an angle to aid off-centre installations. There are four positions which it can be set to.

There are two sizes of overflow barb connectors supplied with Nova-Flo® in order to fit the majority of flexible overflow pipes available. The overflow pipe should be pushed onto the barb connector firmly, creating a watertight fit.

For a tight fitting pipe, submerge the overflow pipe in boiling water to soften it enough to push over the barb connector. Take care not to scald yourself.

For a loose fitting pipe, use the supplied rubber sleeve to enlarge the barb connector. A small smear of silicone sealant on the outside of the sleeve will aid insertion into the pipe.

Please ensure all fittings are watertight by looking for leaks during testing once the installation is complete.

Fig. 2

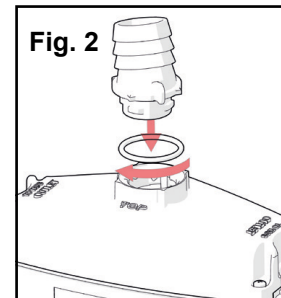


Fig. 3
Part descriptions & dimensions (mm)


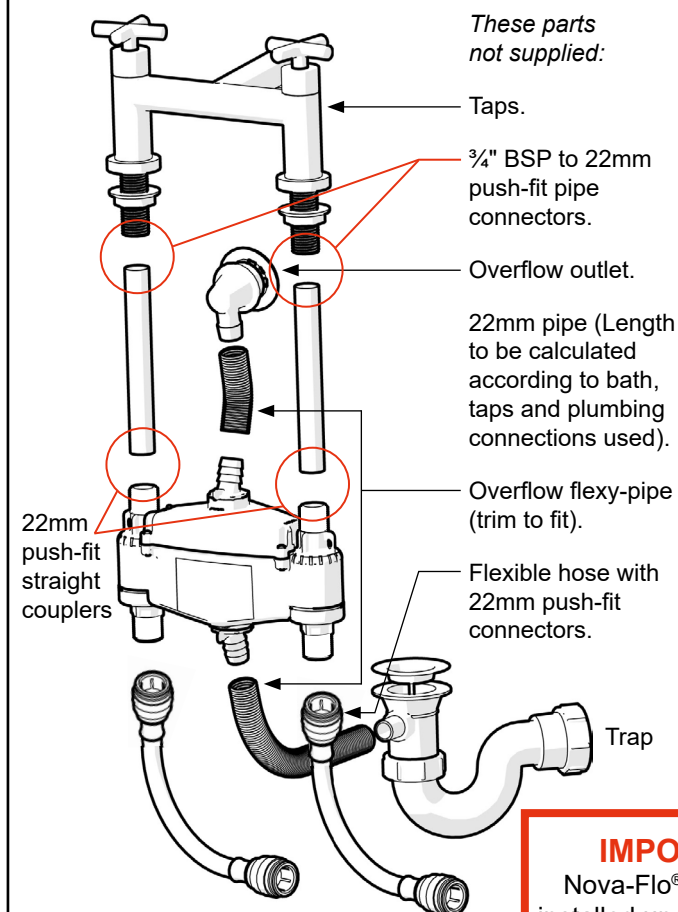


Fig. 4
Part descriptions & dimensions (mm)

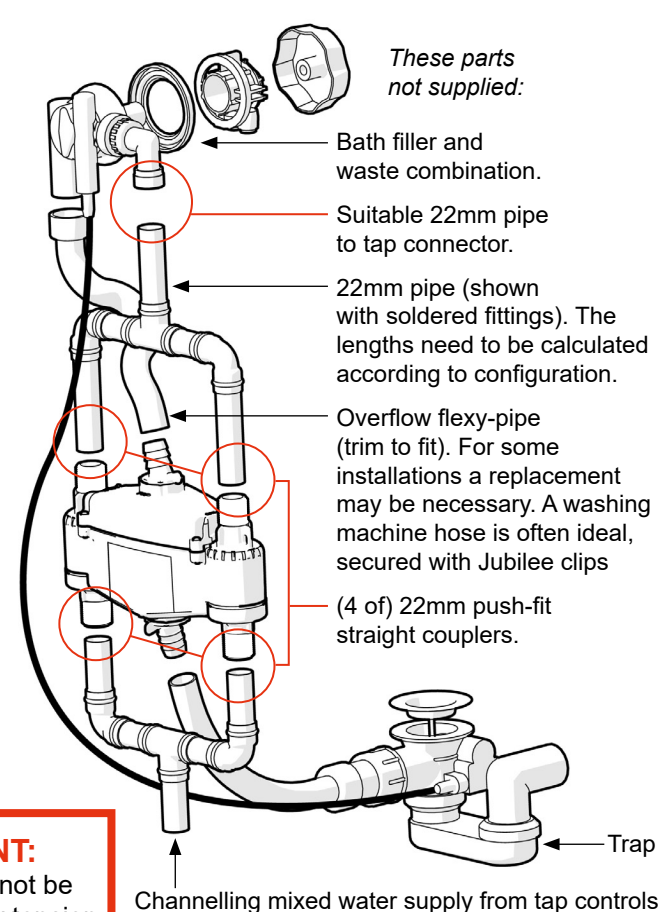

Water supplies

The Nova-Flo® valves are not hot or cold specific, so hot or cold water can be run through either side.

1. Bath and Wall Mounted taps: (See Fig. 3)

The water supplies for the hot and cold feeds must pass up through each side valve (Fig. 1, E) of the Nova-Flo® unit respectively with the upper 22mm spigot connectors (Fig. 1, B) leading to the tap controls or mixer.

2. Bath Filler and Waste Combinations: (See Fig. 4)

The mixed water supply fed from the tap controls is to be split and directed equally to both side valves. The upper connections are then to be reconnected and a branch led to the filler and waste head.

Use of a Thermostatic Mixing Valve (TMV)

It is recommended that a TMV be installed prior to the Nova-Flo® unit. e.g. Thermally mixed water should be directed through one side valve of the Nova-Flo® unit. Nova-Flo® is rated at a maximum hot water temperature of 60 degrees Centigrade.

Purging of system

Once fitted, the system will need to be purged to clear any air trapped inside. This is done by allowing the taps to run at full flow for 1 minute, then turning them off. Repeat this procedure three times. Should the valves actuate, simply turn off the taps, wait for five seconds then turn them on gently. Once the system is purged of air, activation of the valves such as this will not occur. In some installations with an exceptionally fast flow rate, unexpected water shut off may occur before the bath is full. In this occurrence simply restrict the water flow by closing the supply valves slightly.

Testing

Test for leaks before replacing any bath surround or cladding.

To ensure correct operation, you are advised to check its operation once every six months. To do this, keep the taps on and direct water from a shower head or pour water from a large jug into the overflow outlet until activation. Whilst doing this it can be quicker to cup a cloth with your hand below the overflow outlet to channel more water into it.

Should the overflow system ever become clogged with soap, hair etc. resulting in a blockage remove the lower barb connector by rotating it 45 degrees anti-clockwise and clear any debris with a cotton bud or similar, then refit the barb connector. Care should be taken not to lose the o-ring. Should more intensive cleaning be required you can find more maintenance guidance at www.nova-flo.com

Resetting the water upon activation of the valves

If water pours down the overflow outlet, the taps will be substantially shut off. There will remain a small trickle of water which is intentional and reminds the user to turn off the taps (the overflow can easily handle this trickle).

To reset the unit, ensure there is no more water going through the overflow then simply turn off the taps and wait for five seconds. Upon opening the taps full flow is resumed. Your taps and water supply will be unaffected in normal use.

Recommended fittings

To ensure compatibility we recommend installers use the Nova-Flo® fixing packs. Where the fixing pack is not used installers must ensure compatibility of their chosen fittings with the 22mm side valve connections, which are designed for use with push-fit connectors. The lower port of each side valve should be connected to a flexible hose to ensure that the unit is not installed under tension.

WARRANTY Nova-Flo® (the device) is warranted to be free of defective parts, material and construction for a period of 2 years from date of purchase. The device is designed for occasional use as a preventative device and should not be used as a means of automatically setting your bath water level on a regular basis.

About Time Design Ltd (the company) and our suppliers take no responsibility for the quality of fitment of Nova-Flo® or any loss or damage caused by defective installation. We recommend installation by a qualified professional to ensure there are no leaks and that the device performs according to specification. The company takes no responsibility for consequential loss under any circumstances. In event of queries, in the first instance please our helpline on +44 (0)1608 811 707.

Manufactured by	Distributed by	Contact
About Time Design Ltd	Lifescience Products Ltd Unit 19, Cheltenham Trade Park Gloucestershire GL51 8LZ	W: www.nova-flo.com E: info@nova-flo.com T: +44 (0)1608 811707